




## SECUMAX 320 MDP

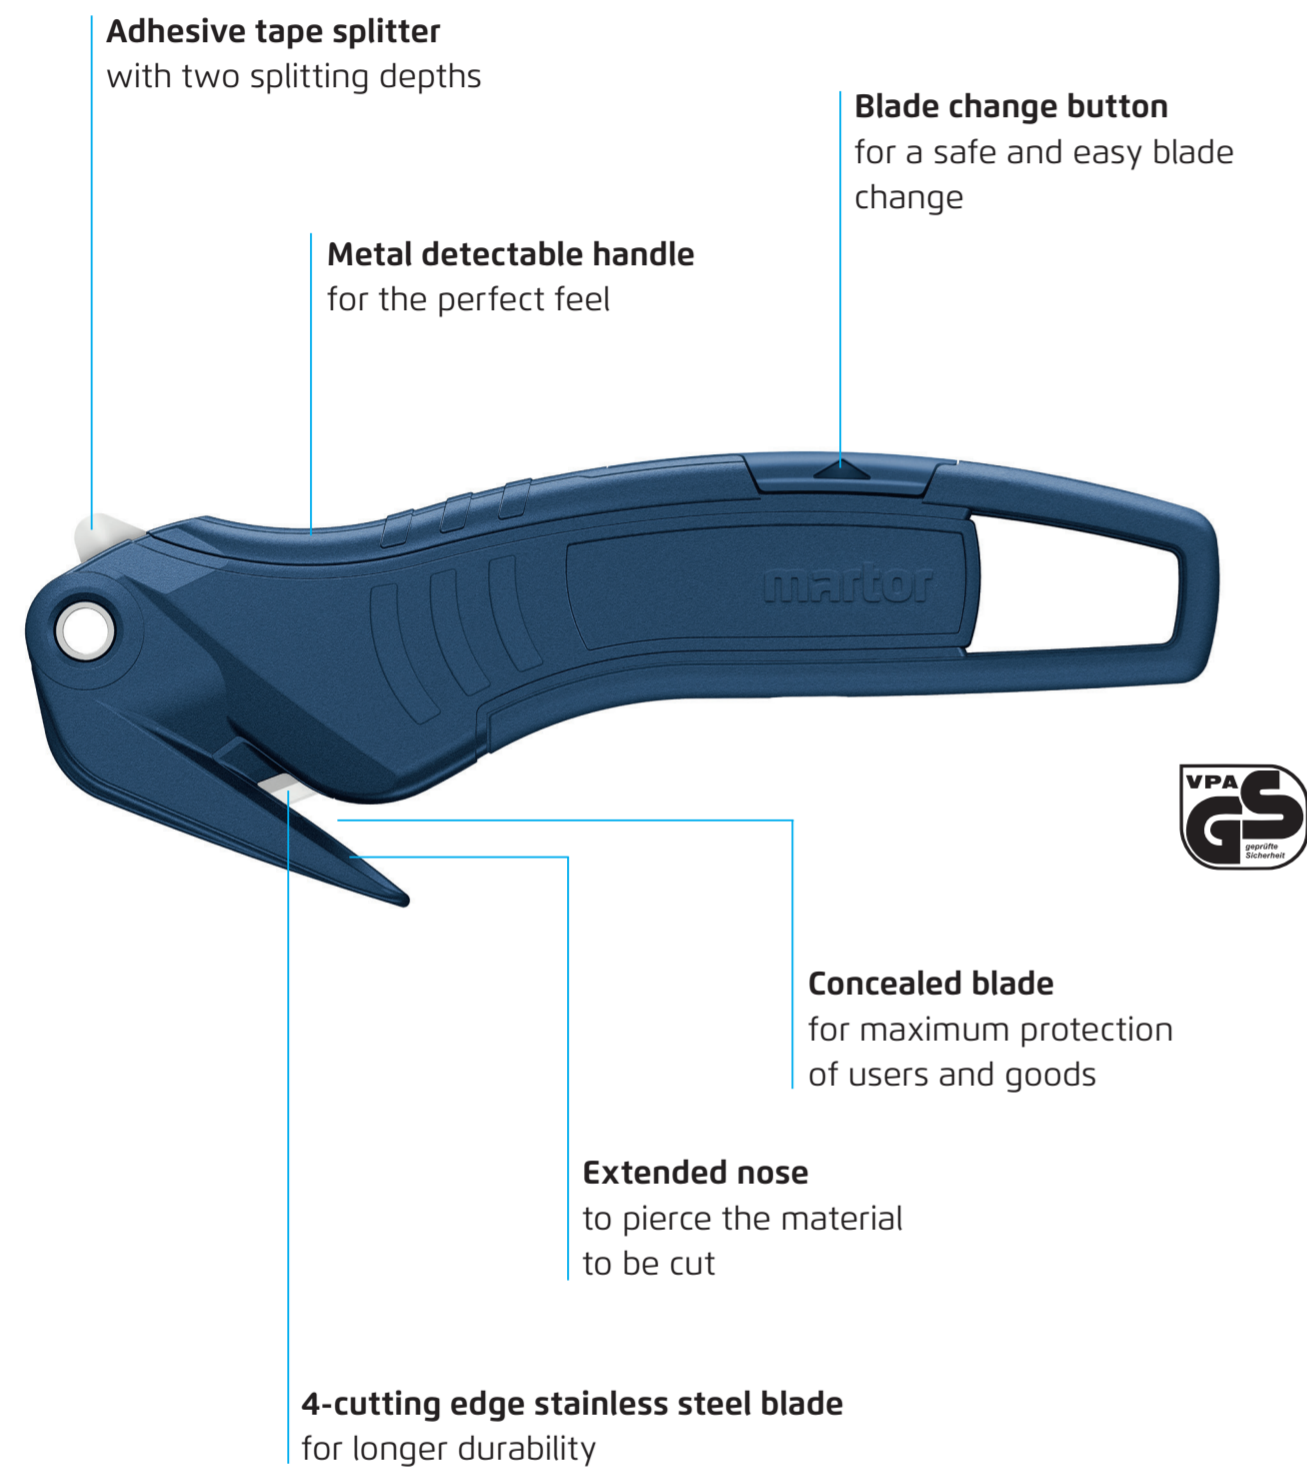


### USAGE

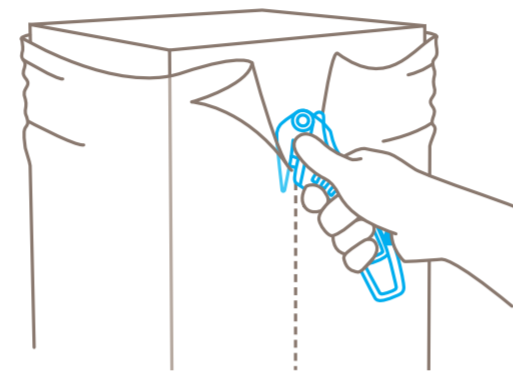


Use the pointed nose to **pierce** the material to be cut. You can also use it to guide the cut.

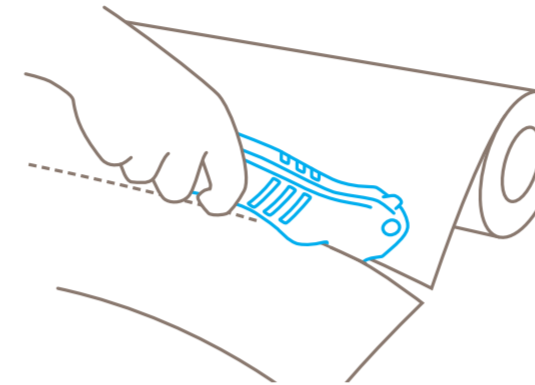

When cutting film and paper, ensure the material to be cut is under **tension**.

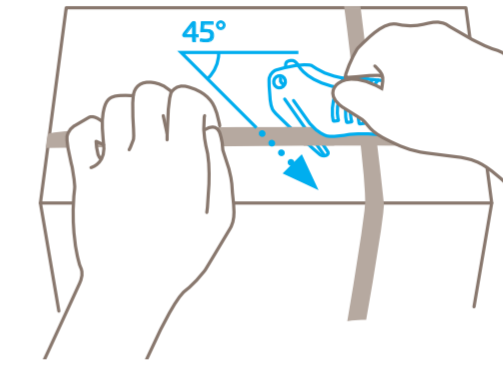


For best results, cut plastic strapping band **diagonally** (at a 45° angle).

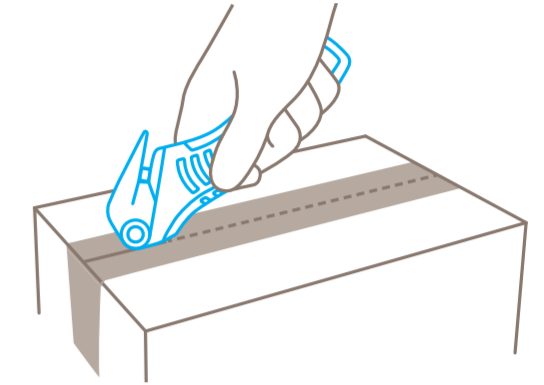


To use the **adhesive tape splitter**, turn the cutting tool around by 180 degrees.


### BLADE CHANGE

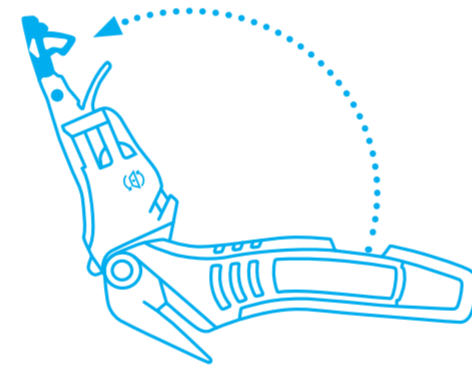


**Fully** open the blade carrier from the handle using the blade change button.

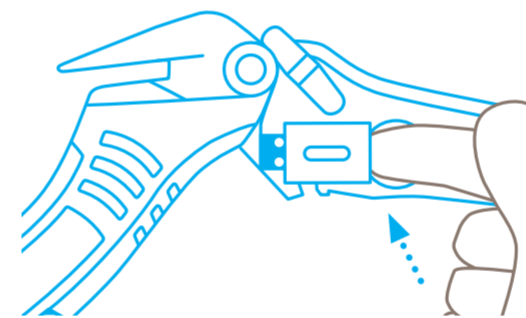

Place the thumb on the blade symbol and open up the blade cover. Remove the blade from the **side**. Turn or change the blade.

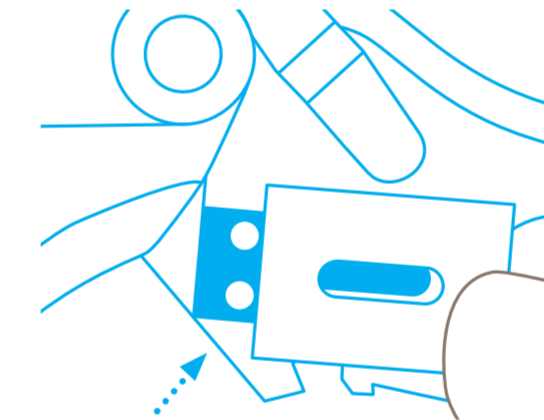


Then align the blade **to the left edge** and insert exactly onto the locating lugs.

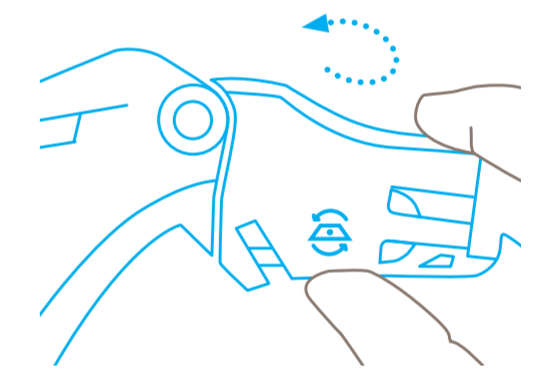


**Close** the blade cover and **fold the blade carrier back** into the handle letting the blade change button **audibly snap** into place.

### PROTECTION OF USER

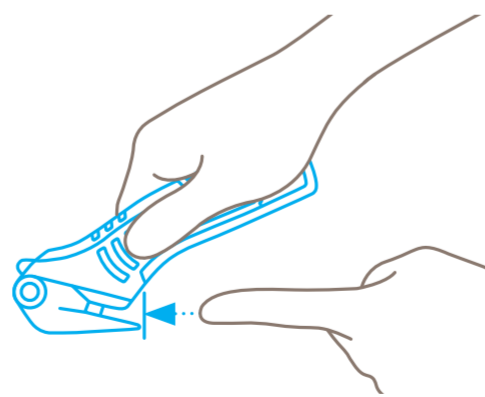


The concealed blade provides a maximum degree of **protection from cut injuries**.

### PROTECTION OF GOODS

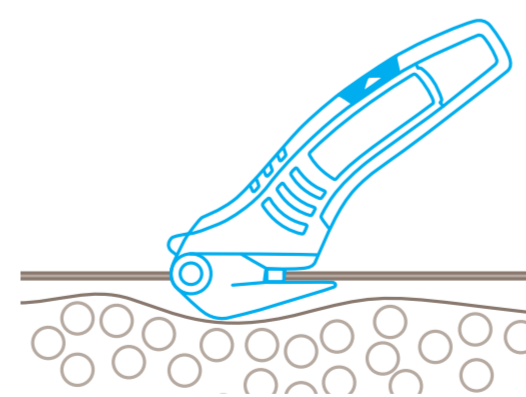


The concealed blade **will not get into contact with your goods** either.

### DISPOSAL

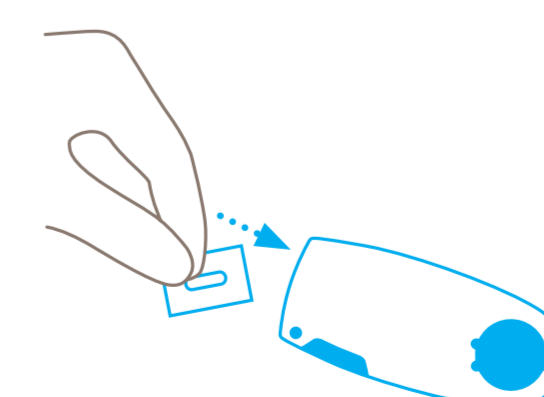

Your **SAFEBOX** is the best place to store **used blades**.

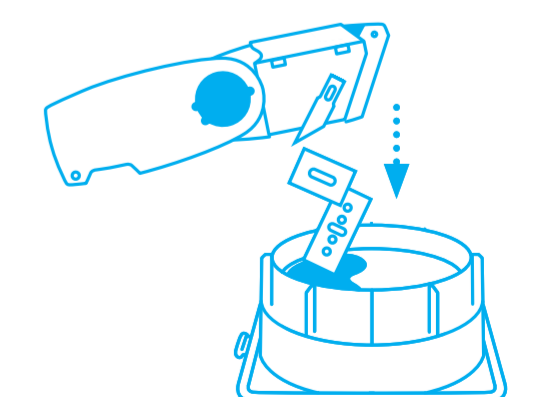

When the **SAFEBOX** is full, **empty all contents** into your **USED BLADE CONTAINER**.

**Please note:** To ensure your product always functions flawlessly, regularly remove any impurities. For additional safety, we recommend wearing gloves.